



INSTALLATION INSTRUCTION

MHTL-BL and MHTL-DTD

Installation and Maintenance Instructions:

- 1.1. This product is to be installed and serviced by a certified electrician.
- 1.2. The Luminaire should be installed in an area with good ventilation, clear of any corrosive or combustible gases and explosive objects.
- 1.3. Supply voltage should be 110-277V, with tolerance of +/- 10% is allowable. An improper installation outside of this range or with the incorrect input voltage will influence the normal operation of this luminaire and result in damage to the lamp and electronic ballast.
- 1.4. The luminaire must be properly grounded to prevent accidental electrical shocks, and to prevent interference from the electrical ballast affecting the normal operation of the luminaire.
- 1.5. Do not open the housing with the luminaire powered on.


Mountings:

Wall Mount:


1. Install fixture on the wall with proper hardware.
2. Connect power source to fixture.

Pole Mount:


1. Mount fixture on the pole. (Up to O.D. 1.4" Round Pole)
2. Connect power source to fixture.

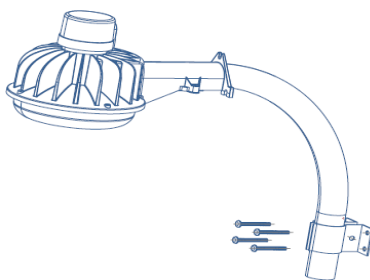

Wall Mount Option 1
with pole and brackets

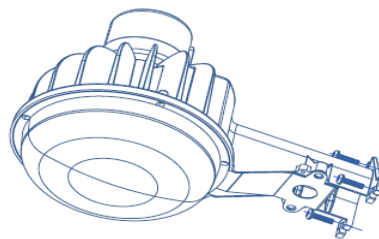

Wall Mount Option 2
without any pole and brackets

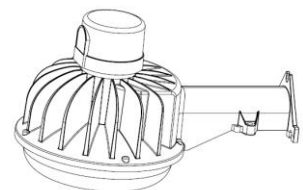

Pole Mount