



Maintenance Instructions:

1. This product is to be installed and serviced by a certified electrician.
2. The Luminaire should be installed in an area with good ventilation, clear of any corrosive or combustible gases and explosive objects.
3. A supply voltage tolerance of +/- 10% is allowable. An improper installation outside of this range or with the incorrect input voltage will influence the normal operation of this luminaire and result in damage to the lamp and electronic ballast.
4. The luminaire must be properly grounded to prevent accidental electrical shocks, and to prevent interference from the electrical ballast affecting the normal operation of the luminaire.

Mounting:

1. Open Junction Box on top of the fixture.
2. Feed power into Junction Box through the 1/2" hole with provided black seal tight connector.
3. Connect wires and close Junction Box.
4. Secure fixture with the hook and tighten set screw.
5. For Pendant Mount, unscrew Hook and secure fixture on 3/4" threaded pipe. Repeat procedure above.
6. For different size pipe, please use adapter.

