

**Maintenance Instructions:**

1. This product is to be installed and serviced by a certified electrician.
2. The Luminaire should be installed in an area with good ventilation, clear of any corrosive or combustible gases and explosive objects.
3. A supply voltage tolerance of +/- 10% is allowable. An improper installation outside of this range or with the incorrect input voltage will influence the normal operation of this luminaire and result in damage to the lamp and electronic ballast.
4. The luminaire must be properly grounded to prevent accidental electrical shocks, and to prevent interference from the electrical ballast affecting the normal operation of the luminaire.

Standard Chain/Cable Mount (Chain or Cable is not included):

1. Secure aircraft cable or metal chain at four corners on top of the fixture.
2. There are ½” knock outs on the both sides and top of the fixture, use the knock out to feed power into the fixture.
3. Open top cover to connect power source to LED driver.
4. Close top cover and energize the fixture.

