

Installation and Maintenance Instructions:

- This product is to be installed and serviced by a certified electrician.
- The Luminaire should be installed in an area with good ventilation, clear of any corrosive or combustible gases and explosive objects.
- A supply voltage tolerance of +/- 10% is allowable. Voltage outside of this range will influence the normal operation of this luminaire and result in damage to the luminaire.
- The luminaire must be properly grounded to prevent accidental electrical shocks, and to prevent interference from the electrical ballast affecting the normal operation of the luminaire.

