


INSTALLATION INSTRUCTION

Turn off power from circuit breaker before installation or servicing.

All work should be done by qualified electrician.

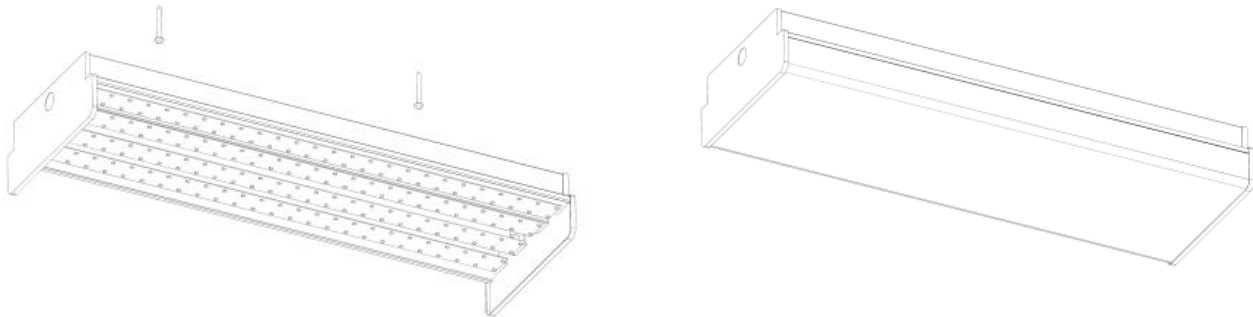

Input Voltage:

120-277VAC 50Hz/60Hz

Surface Mount Installation:

1. Remove bottom diffuser from fixture.
2. Open ½” knock out from the back of the fixture and feed power source into fixture, then install fixture on ceiling surface using proper anchors and screws through the mounting holes inside the fixture.
3. Connect power source to LED Driver inside the fixture.
4. It is highly recommended to properly ground the fixture.
5. Check all connection and reassemble diffuser on fixture.

Troubleshooting Guide:

Light doesn't turn on at all:

- Check input voltage to make sure it is in the range.
- Check all wiring connection to make sure nothing is loose.
- Change to a working LED driver to see if problem solve.

Flickering:

- Check input voltage.
- Change to a working LED driver to see if problem solve.

Defective LEDs on PCB:

- Replaced LED PCB.

Technical Support:

MHT LIGHTING

Tel: 718-524-4370