

# MHTL-LHB-PRM Installation Instructions

Please read the instruction carefully before installation and preserve this manual for future reference.

## NOTE

Sulfide and corrosive chemical materials will damage the housing and surface, even damage the chip inside. The suggested ambient temperature is -4F to 104F, if exceed this range, the lifespan will be affected.

## WARNING


1. Please cut off the power supply before installation.
2. Please do not connect this product to high voltage power supply before installation and strictly follow the rated parameters.
3. If the external wires are damaged, replacement or maintenance can only be performed by qualified people after power cut off.
4. In the process of installation, it is forbidden to use violent means to installation.

## INSTALLATION INSTRUCTIONS

- Installation to be undertaken only by qualified personnel
- Disconnect all power before commencing installation.
- Industrial luminaires are suitable only for indoor use.
- Allow sufficient slack in the wire to accommodate adjustment of luminaires.
- The LEDs in the luminaire are not replaceable and the casing should not be opened. When the LEDs reach end of life the whole luminaire shall be replaced.
- The external flexible cable of these luminaries cannot be replaced. If the cord is damaged, the luminaire shall be destroyed.

## SUSPENDED INSTALLATION DIAGRAM:

1. Install aircraft cable on the fixture

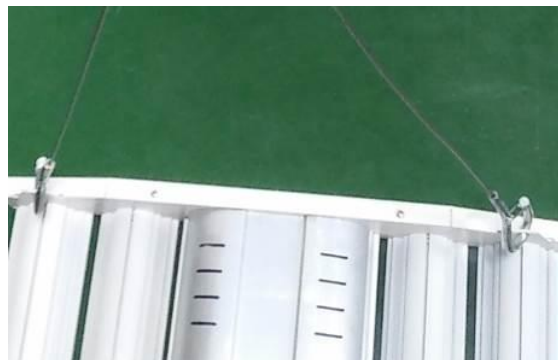

2. Adjust aircraft cable to desired length



3. Detail diagram

