



INSTALLATION INSTRUCTION

DSWP/WP

- 1. Installation and Maintenance Instructions:** (This information is subject to change without notice)
 - 1.1 This product is to be installed and serviced by a certified electrician.
 - 1.2 Maintenance is to be performed when the power is off and the lamp has cooled down.
 - 1.3 The Luminaire should be installed in an area with good ventilation, clear of any corrosive or combustible gases and explosive objects.
 - 1.4 A supply voltage tolerance of +/- 10% is allowable. An improper installation outside of this range or with the incorrect input voltage will influence the normal operation of this luminaire and result in damage to the lamp and electronic ballast.
 - 1.5 The luminaire must be properly grounded to prevent accidental electrical shocks, and to prevent interference from the electrical ballast affecting the normal operation of the luminaire.
 - 1.6 Do not remove the lamp when the luminaire is powered on.
 - 1.7 To prevent damage to the bulb, replace the lens if it becomes cracked.


1) Loosen two Hex Nuts on the fixture back plate




2) Remove Mounting Plate



3) Install Mounting Plate to the wall. Ensure that the plate is firmly secured

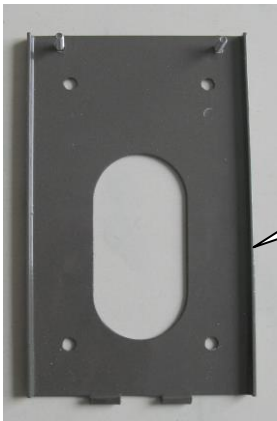

4) If wires come out from the back of the fixture to connect power into recessed junction box, open the 1/2" coin plug and make sure apply silicon to seal the hole when it is done

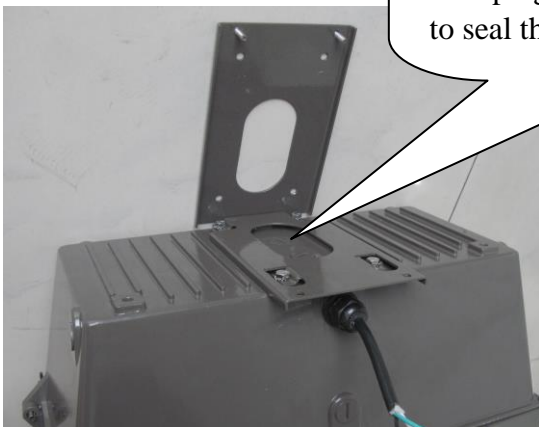

5) Reinstall and tighten two hex nuts. Check all connection before energize fixture

