




1. Main Data:

Fixture Model	Lamp Type	Input Voltage (VAC)	Input Wattage (W)	Input Current (A)	Ballast Model	Power Factor	Net Weight (lbs)
MHT-FL-40E	ST40W	120V~277V AC 50/60Hz	42	0.35~0.15	MHTST-70-U-FL	≥0.95	15.3
MHT-FL-70E	ST70W		74	0.61~0.27	MHTST-70-U-FL		15.5
MHT-FL-100E	ST100W		105	0.88~0.38	MHTST-100-U-FL		16.1
MHT-FL-150E	ST150W		158	1.31~0.59	MHTST-150-U-FL		17.0

2. Dimensions: inch (mm)

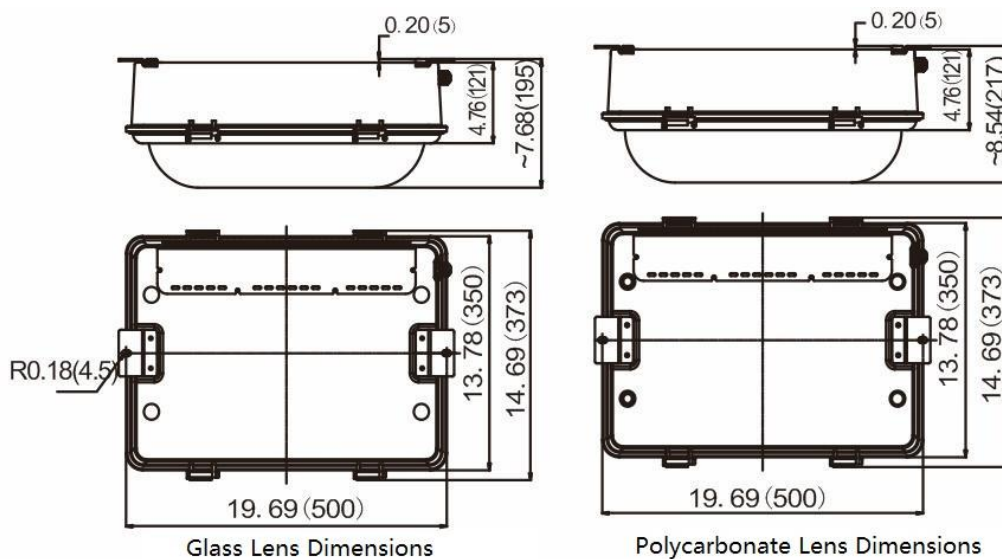

3. Installation and Maintenance Instructions:

- 3.1 The product is to be installed and serviced by a certified electrician.
- 3.2 Maintenance is to be performed when the power is off and after the lamp has cooled down.
- 3.3 The Luminaire should be installed in an area with good ventilation, clear of any corrosive or combustible gases and explosive objects.
- 3.4 A supply voltage tolerance of +/- 10% is allowable. An improper installation outside of this range will influence the normal operation of the luminaire which will result in damage to the lamp and the electronic ballast.
- 3.5 The luminaire must be properly grounded to prevent accidental electrical shock, and to prevent interference from the electronic ballast to affect the normal operation of the luminaire.
- 3.7 Operation of the luminaire with the lens open is forbidden.

Note: This information is subject to change without notice.

Warning: The Luminaire must be grounded properly to prevent electrical shocks and accidental power leakage.